

Smart Color E Ink Canvas



PixTree

Where Memories and Art Grow

 
1. Specification

Size	13.3"
Display	E Ink Spectra 6
Resolution	1200 × 1600
PPI	150
Operating Temperature Range	0°C - 50°C
Battery Capacity	10,000 mAh
Charging	USB-C
Wi-Fi	2.4 GHz
Bluetooth	BT 5.4 LE
NFC	NFC
Frame Material	Aluminium / Whitewood / Polystyrene

2. What' s In The Box?



Type-C cable



Smart Color E Ink Canvas



Screws x 2



Wall plugs x 2




User manual




MicroSD card


3. Overview

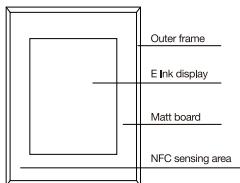


Front View

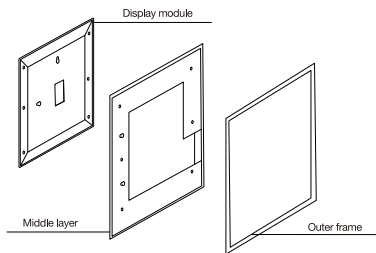

Module Design

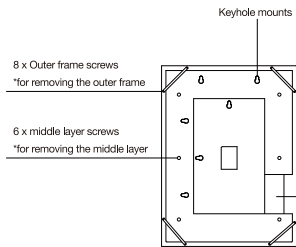

Back View

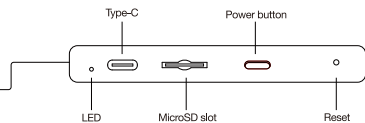


Read carefully before use. Images for reference only.

4. Product Installation


Step 1

Place the canvas where you want it on the wall and use a pencil to draw a light horizontal line along the top edge.

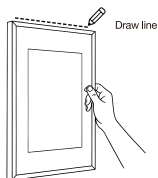

Step 2

From the line, measure **41 mm** down for portrait hanging or **62 mm** down for landscape hanging, and mark the screw points.

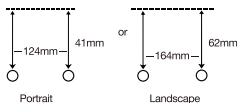


*portrait hanging: screw spacing **124 mm**

*landscape hanging: screw spacing **164 mm**


Step 3

Drill holes ($\Phi 6$ mm) at the marked points, insert wall plugs, then screw in the screws — leaving 4-5 mm of the screw heads exposed.

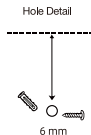

Step 4

Align the keyhole mounts on the back of the canvas with the screw heads, then gently slide downward to lock in place.

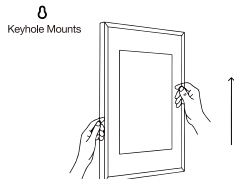

* Ensure all wall plugs and screws are securely fastened before hanging the canvas.

* Do not press or impact the E Ink screen during installation to avoid damage.

5. Device Status

Status	Bluetooth	Wi-Fi	NFC
On- App Can Connect	✓	✓	✓
Sleep -App can wake device	✓	×	✓
Power Off	×	×	×

6. Button Control

Function	Button Operation	Buzzer	Result
Power On	Press for 2S	1 Short Beep	Screen on
Power Off	Press for 5S	1 Long Beep	Device Shutdown
Sleep (Idle)	No Button Operation Required	2 Short Beeps	Standby
Wake Up	Press for 1S	1 Short Beep	Device Wake-up & Content Sync/Refresh

* E Ink display retains images with near-zero power.The last image stays when standby/powered off.

* Wi-Fi turns off when idle but wakes automatically when updating images.

7. LED Indicator

Device Status	LED Indicator Status
Charging	White LED On
Fully Charged	White LED Off
Charging Error	White LED Flashing

8. Low Battery

When the canvas battery is lower than 10%, the App will prompt you to charge in time.

9. Connect Via App

Step 1: Download App

Search for “PixTree” on App Store or Google Play, and install it.

Step 2: Register an Account

Launch the app and register an account.

Step 3: Bind Device

Method 1: Bind via NFC Tap

1. Turn on Wi-Fi on your phone and connect to your 2.4G home Wi-Fi.
2. Launch the app and tap the “DEVICES” tab at the bottom.
3. Proceed as follows: Add Frame → NFC Tap → Connect to the same Wi-Fi network that your phone is connected to (enter password) .
4. Hold your phone close to the device's NFC sensing area to finish binding & configuration.

Method 2: Bind via Bluetooth Scan

1. Turn on Bluetooth and Wi-Fi on your phone, then connect to your 2.4G home Wi-Fi.
2. Launch the app and tap the “DEVICES” tab at the bottom.
3. Proceed as follows: Add Frame → Bluetooth Scan → Select Device → Connect to the same Wi-Fi network that your phone is connected to (enter password) → Complete binding & configuration.

10. Cast To Frame Via App

Step 1

Launch the app and go to the DISCOVER or LIBRARY tab. Select your desired image to open its details page.

Step 2

Choose your paired device and tap CAST TO FRAME to finish casting.

11. NFC Photo Transfer (No App Required)

Tap your phone against the frame's NFC sensing area to launch the private photo sharing page.

No account registration or application is required, with full privacy protection. Share photos of parties and gatherings right away.

12. Maintenance and Care

Cleaning the E Ink surface

Use a soft, dry microfiber cloth to gently wipe the E Ink display.

Do not use alcohol, solvents, or any liquid cleaners — moisture may damage the screen.

Frame and matte care

The outer matte border is made of paper material.

Avoid contact with water, humidity, or prolonged sunlight exposure.

If necessary, clean gently with a dry cloth only.

General maintenance

Keep the device away from high humidity, dust, or magnetic interference.

Avoid dropping or pressing the screen surface.

13. Important Safety Instructions

If you have a history of epilepsy or are susceptible to seizures triggered by flashing or rapidly changing images, avoid staring continuously at the screen during display refreshes. Although E Ink refreshes infrequently, intermittent image updates may still pose a risk. Consult your doctor before use.

- Use only official or certified power adapters and Type-C cables for charging. Using unapproved chargers may cause fire or electric shock.

- Do not expose the device to water, rain, high humidity or extreme temperatures (0°C - 50 °C). Prolonged exposure may damage the display or internal electronics.
- Do not drop, bend, or apply pressure to the screen surface or frame. A cracked display or deformed frame cannot be repaired under normal use.
- Unauthorized disassembly, modification or repair attempts may expose you to risk and void the warranty.
- Keep the device and small accessories such as screws, wall plugs and power cables out of reach of children and pets. These parts may present a choking or entanglement hazard.
- It is also recommended to avoid plugging the device into overloaded or ungrounded outlets.
- Long-term storage: If the device is unused for months, allow a full screen refresh every few months to prevent ghosting or residual images.
- Do not press or scratch the E Ink surface with sharp or pointed objects such as keys or pens — the display is fragile and may crack or deform under pressure.

Smart Color E Ink Canvas



Explore More



Download App

PixTree

Where Memories and Art Grow

HIMEDIA GLOBAL LIMITED

